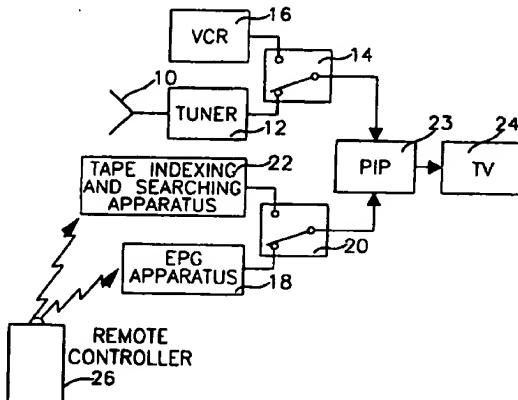




INTERNATIONAL APPLICATION PUBLISHED UNDER THE PATENT COOPERATION TREATY (PCT)

(51) International Patent Classification 6: H04N 5/445	A1	(11) International Publication Number: WO 97/34413 (43) International Publication Date: 18 September 1997 (18.09.97)
<p>(21) International Application Number: PCT/US97/04074</p> <p>(22) International Filing Date: 14 March 1997 (14.03.97)</p> <p>(30) Priority Data: 60/013,371 15 March 1996 (15.03.96) US</p> <p>(71) Applicant (<i>for all designated States except US</i>): E GUIDE, INC. [US/US]; Suite 870, 135 North Los Robles Avenue, Pasadena, CA 91101 (US).</p> <p>(72) Inventors; and</p> <p>(75) Inventors/Applicants (<i>for US only</i>): YUEN, Henry, C. [US/US]; P.O. Box 1159, Redondo Beach, CA 90278 (US). MANKOVITZ, Roy, J. [US/US]; 18057 Medley Drive, Encino, CA 91316 (US). KWOK, Daniel, S. [US/US]; 3975 Hampstead Road, Lt Canada-Flintridge, CA 91011 (US). LEUNG, Elsie, Y. [US/US]; 1302 Via Del Rey, South Pasadena, CA 91030 (US).</p> <p>(74) Agent: RAHN, LeRoy, T.; Christie, Parker & Hale, L.L.P., P.O. Box 7068, Pasadena, CA 91109-7068 (US).</p>		(81) Designated States: AL, AM, AT, AU, AZ, BA, BB, BG, BR, BY, CA, CH, CN, CU, CZ, DE, DK, EE, ES, FI, GB, GE, GH, HU, IL, IS, JP, KE, KG, KP, KR, KZ, LC, LK, LR, LS, LT, LU, LV, MD, MG, MK, MN, MW, MX, NO, NZ, PL, PT, RO, RU, SD, SE, SG, SI, SK, TI, TM, TR, TT, UA, UG, US, UZ, VN, YU, ARIPO patent (GH, KE, LS, MW, SD, SZ, UG), Eurasian patent (AM, AZ, BY, KG, KZ, MD, RU, TI, TM), European patent (AT, BE, CH, DE, DK, ES, FI, FR, GB, GR, IE, IT, LU, MC, NL, PT, SE), OAPI patent (BF, BJ, CF, CG, CI, CM, GA, GN, ML, MR, NE, SN, TD, TG).
<p>Published <i>With international search report.</i> <i>Before the expiration of the time limit for amending the claims and to be republished in the event of the receipt of amendments.</i> </p>		

(54) Title: COMBINATION OF VCR INDEX AND EPG



(57) Abstract

A television system has a television viewing mode (50) and a guide mode (56, 58). The guide mode includes an electronic program guide (EPG), which provides the viewer program information for tuned programs, and a tape index guide (TIG), which provides information for programs recorded on a video cassette (16). In both guides, real time images of a program are displayed in a PIP window (30) on the television screen and guide information (56, 58) is displayed in the background. In both guides, the viewer may switch between a currently telecast program or a recorded program. The viewer may access either guide from the television mode and vice versa. In the guide mode, the viewer may independently switch the guide information and the type of program, i.e., tuned or recorded, in the PIP window.

FOR THE PURPOSES OF INFORMATION ONLY

Codes used to identify States party to the PCT on the front pages of pamphlets publishing international applications under the PCT.

AM	Armenia	GB	United Kingdom	MW	Malawi
AT	Austria	GE	Georgia	MX	Mexico
AU	Australia	GN	Guinea	NE	Niger
BB	Barbados	GR	Greece	NL	Netherlands
BE	Belgium	HU	Hungary	NO	Norway
BF	Burkina Faso	IE	Ireland	NZ	New Zealand
BG	Bulgaria	IT	Italy	PL	Poland
BJ	Benin	JP	Japan	PT	Portugal
BR	Brazil	KE	Kenya	RO	Romania
BY	Belarus	KG	Kyrgyzstan	RU	Russian Federation
CA	Canada	KP	Democratic People's Republic of Korea	SD	Sudan
CF	Central African Republic	KR	Republic of Korea	SE	Sweden
CG	Congo	KZ	Kazakhstan	SG	Singapore
CH	Switzerland	L1	Liechtenstein	SI	Slovenia
CI	Côte d'Ivoire	LK	Sri Lanka	SK	Slovakia
CM	Cameroon	LR	Liberia	SN	Senegal
CN	China	LT	Lithuania	SZ	Swaziland
CS	Czechoslovakia	LU	Luxembourg	TD	Chad
CZ	Czech Republic	LV	Latvia	TG	Togo
DE	Germany	MC	Monaco	TJ	Tajikistan
DK	Denmark	MD	Republic of Moldova	TT	Trinidad and Tobago
EE	Estonia	MG	Madagascar	UA	Ukraine
ES	Spain	ML	Mali	UG	Uganda
FI	Finland	MN	Mongolia	US	United States of America
FR	France	MR	Mauritania	UZ	Uzbekistan
GA	Gabon			VN	Viet Nam

COMBINATION OF VCR INDEX AND EPG

5 **Field of the Invention**

This invention relates to the field of television, and more particularly to a method and apparatus for switching between a television viewing mode and a guide mode which comprises program guide screens, for telecast programs, and video tape index guide screens, for recorded programs.

10

Background of the Invention

Television systems are available which include various types of on-screen guides to provide a viewer with information about available programs. Electronic program guides (EPG) provide information about currently telecast programs and programs to be broadcast in the future. An EPG includes program listings which provide time, channel, length, and title information for a program and may also provide a brief description of the content of the program in a separate portion of the screen. Many EPG systems have the capability to sort program listings by type, time, or viewer preferences.

20 Tape indexing systems for video cassette recorders (VCR) allow a viewer to identify a recorded program stored in the viewer's video tape library. Such systems also provide an on-screen directory of programs available on a loaded tape and can automatically scan through the video tape to the position of the desired program stored on the tape.

25 Some types of EPG and tape index guides include screens with a picture in picture (PIP) window for displaying moving, real time images or still images from a selected television program.

It is desirable to provide a television system which has both types of guides, i.e., an EPG and a tape index guide, and which facilitates navigation in a guide mode between the various guide screens and between the guide mode and a normal television viewing mode, in which a selected television program is viewed full screen.

30 It is also desirable to provide a viewer with the capability to control which program is displayed in the PIP window in the guide mode in the same manner the viewer would in the normal television viewing mode. This includes switching between tuned channels or between the outputs of the tuner and the VCR.

35

Summary of the Invention

5 A television system according to the present invention includes a tape indexing and searching (TIS) apparatus for generating a tape index display, an electronic program guide (EPG) apparatus for generating an EPG display, a VCR for playing recorded television programs, and a tuner for receiving broadcast television programs. The video outputs of the two guide apparatus are connected to a guide switch and the video output of the tuner and the VCR are connected to a program source switch. A PIP chip is operatively connected to the
10 guide switch and the program source switch such that in an active mode the PIP chip displays on a television screen a PIP window displaying the moving, real time images of a selected program overlaid on a background comprising selected guide information.

15 Preferably a microprocessor controls and coordinates the operation of the PIP chip and the switches so that the viewer may navigate between the various screens of the guide mode and the normal television viewing mode, and display a desired program in the PIP window.

20 By pressing a guide/tv button on the remote controller, the viewer may enter either an EPG or tape index guide from the normal television mode and also return to the television mode from either type of guide. In either the television or guide mode, a program source button toggles the program display between a tuned program and a recorded program playing on the VCR. In the guide mode, a guide/index button toggles between the EPG and the tape index guide. In the television mode, a PIP button allows the viewer to view the program being output from one program source, i.e., the tuner or the VCR, while viewing the program output from the other program source full screen.

25

30

35

Brief Description of the Drawings

The features of a specific embodiment of the best mode contemplated of carrying out
5 the invention are illustrated in the drawings, in which:

FIG. 1 is a schematic block diagram of apparatus for practicing the invention;
FIG. 2 is a remote controller for operating the apparatus of FIGS. 1 and 9;
FIGS. 3 to 7 are television screens formatted to practice the invention with the
apparatus of FIG. 1;

10 FIG. 8 is a schematic block diagram of another embodiment of apparatus for practicing
the invention;

FIG. 9 is a flow diagram illustrating the operation of the PLAY button in either a guide
mode or a television viewing mode;

15 FIGs. 10A and 10B are flow diagrams illustrating the operation of a GUIDE/TV
button in the television viewing mode;

FIGs. 11A and 11B are flow diagrams illustrating the operation of an INDEX button in
the guide mode;

FIGs. 12A and 12B are flow diagrams illustrating the operation of the GUIDE/TV
button in the guide mode; and

20 FIGs. 13A and 13B are flow diagrams illustrating the operation of a PIP button in the
television viewing mode;

Detailed Description

A television system according to a presently preferred embodiment of the invention
25 combines an electronic program guide (EPG) and a tape index guide. The EPG is of the type
which provides one or more screens of program listings. These listings may include currently
telecast programs and programs to be broadcast in the future. The program listings are sorted
by category and by time in different screens of the guide. The EPG includes a picture in
30 picture (PIP) window for display of a currently telecast program. The viewer may change the
program displayed in the PIP window by cursoring through listings of currently telecast
programs in one of the guides.

The tape index guide system is of the type which is provided with a VBI decoder to
decode information, such as title, channel, date, time, and length of broadcast programs and
utilizes the information in providing a directory of programs stored on a recorded tape and for
35 controlling the VCR. The tape index guide system is also provided with a VBI encoder for
inserting control and directory information onto the tape on which the broadcast program is
being recorded, either in the VBI portions of the video track or in the control track of the
tape. From the control and directory information stored on the tape, the tape index guide

5 system creates a program directory which may be displayed on the screen. The directory enables the viewer to determine the location of a recorded program in his or her tape library and control the playing of a selected program on a tape loaded in the VCR. The on-screen directory includes a PIP window. The PIP window may be used to display an entire selected program or a selected video clip from the program as the program listing is selected in the directory.

10 The television system according to the invention allows the viewer access to either type of guide, i.e., EPG or tape index guide, from a television mode and also allows navigation between the two guides in a guide mode.

15 In FIG. 1 a source of television signals 10, such as a terrestrial antenna or cable, is connected by a television tuner 12 to one input of program source switch 14. The video output of a video cassette recorder (VCR) 16 is connected to the other input of switch 14. An EPG apparatus 18 is connected to one input of guide switch 20. A tape indexing and searching (TIS) apparatus 22 is connected to the other input of switch 20. The outputs of switches 14 and 20 are connected to the respective inputs of a conventional PIP integrated circuit chip 23. The output of PIP chip 23 is connected to the video input of a television 24 having a screen (not shown). When PIP chip 23 is turned off, one video program from tuner 12 or VCR 16 is displayed on the screen of television 24 full screen. When PIP chip 23 is turned on, one video program from tuner 12 or VCR 16 is displayed in a PIP window of the screen, while textual material from EPG apparatus 18 or TIS apparatus 22 is displayed in the background. EPG apparatus 18 and TIS apparatus 22 are also connected by hardwire or wireless means (not shown) to tuner 12 and VCR 16. The audio channels from tuner 12 and VCR 16 are coupled by an audio amplifier to a loudspeaker (not shown), which could be that of television 24. A remote controller 26 permits a television viewer to operate the apparatus. Depending upon the physical locations of the various components, one or more microprocessors are used to control the various components - EPG apparatus 18, TIS apparatus 22, tuner 12, VCR 16, and PIP chip 23, as well as switches 14 and 20 - responsive to remote controller 26.

30 As shown in FIG. 2, remote controller 26 has a GUIDE/TV button 28, an INDEX button 30, a PLAY button 32, a RECORD button 34, and a STOP button 35, which control the operation of the apparatus in FIG. 1. In an alternate embodiment described below, the remote controller also has a PIP button 62. Up and down arrow buttons 36 and 38 control the movement of an on-screen cursor in television 24. A row of buttons 40, 42, 44, and 46, which are marked with the colors blue (B), green (G), yellow (Y), and red (R), are used to select on-screen color-coded prompts which may be provided on the various guide screens.

35 The screen formats of FIGS. 3 to 7 each have a PIP window 50 overlaid on a

background area 52. Background area 52 includes a banner and message prompting area 54 at the top of the screen, a program description area 56 in the upper right-hand corner of the screen adjacent to PIP window 50, and a program listing area 58 below areas 52 and 56. The viewer can move a cursor 60 vertically to highlight one of the lines displayed in listing area 58 by operating arrow buttons 36 and 38 on remote controller 26.

The operation of the apparatus will now be described starting in the television mode with PIP chip 23 turned off. In the television mode, moving, real time images of a program are displayed full screen on the television. The program displayed may be either a currently telecast program being received by tuner 12, or a recorded program played from a video tape loaded in VCR 16. Switch 14 controls whether the video input to the television is from the tuner 12 or the VCR 16. Switch 14 is controlled by the PLAY button 32 on the remote controller 26. By pressing the PLAY button, the viewer controls the input source to the television and switches between the currently telecast program output from the tuner and the recorded program being output by the VCR, as shown in FIGS. 9A and 9B. Preferably, when no recorded program is being played by the VCR 16, a microprocessor (not shown) associated with the apparatus controls switch 14 to remain switched to the tuner. Alternatively, if a tape is loaded in VCR 16, but not playing, when the viewer presses PLAY button 32, the microprocessor will substantially simultaneously control switch 14 to switch to VCR 16 and control the VCR to play the tape (FIG. 9B).

According to a presently preferred embodiment, the viewer is able to select between a EPG, a tape index guide, and a normal television mode. As used herein, "television mode" refers to normal television viewing wherein a currently telecast or recorded program is displayed full screen. "Guide mode" refers to displaying one of the guide screens according to the invention, which may be either an EPG or a tape index guide. The guide screens comprise graphics in the background area 52 and a program being displayed in the PIP window 50.

The GUIDE/TV button on the remote controller 26 controls guide switch 20 and PIP chip 23 and is used to switch between the television mode and the guide mode. When the viewer presses GUIDE/TV button 28, PIP chip 23 is turned on, guide switch 20 couples EPG apparatus 18 or TIS apparatus 22 to PIP chip 23, and television 24 displays an EPG or tape index guide, respectively.

Preferably, the microprocessor controlling guide switch 20 is sensitive to the condition of program source switch 14 so that when switch 14 is switched to tuner 12, the microprocessor controls guide switch 20 to couple EPG apparatus 18 to PIP circuit 23 when the GUIDE/TV button 28 is pressed. This causes television 24 to display the screen of FIG. 3. When the EPG is entered directly in this manner, the last channel to which television

28 was tuned in the television mode is displayed at the top of listing area 58, e.g., PBS Channel 28, and EPG information is displayed in listing area 58. The real time telecast program highlighted by cursor 60 in listing area 58 is displayed as a moving real time image in PIP window 50, e.g., the program telecast on ABC Channel 7, and a description of this program is displayed in area 56, as shown in FIG. 10A.

5 Alternatively, if switch 14 is switched to VCR 16 in the television mode and the viewer presses GUIDE/TV button 28, PIP chip 23 is turned on, and the microprocessor controls guide switch 20 to couple TIS apparatus 22 to television 24 so that tape index guide information is displayed in background area 52 with the program output from the VCR displayed in PIP window 50, as shown in FIG. 10B.

10 In another preferred embodiment, if the tape playing in the VCR is encoded with control and directory information, the tape index guide screen of FIG. 7 is displayed. A 15 directory of the programs or program segments on the tape loaded in VCR 16 is displayed in listing area 58. A listing for the program displayed in the PIP window is highlighted by cursor 60 and a description of the program is displayed in area 56. Preferably, when the viewer moves cursor 60 to another listing, TIS apparatus 22 uses the control and directory 20 information stored on the tape to initiate a program searching which it controls VCR 16 to locate and queue up the highlighted program and play the tape so that the newly selected recorded program is displayed in PIP window 50.

25 Due to the mechanical limitations of the VCR, locating a selected program on a videotape may take the up to a minute or more. Accordingly, it is desirable to delay such a program search by the VCR until the viewer is committed to searching for the recorded program on the tape. This is accomplished in the following alternate embodiments: in one embodiment, the program search is delayed until the program listing in listing area 58 is highlighted with cursor 60 for a set period of time, e.g., 5 seconds. In another embodiment, the viewer initiates a search by positioning cursor 60 on the desired program and then pressing a set sequence of buttons on the remote controller to command TIS apparatus 22.

30 According to alternate embodiments of the invention, once the selected program, e.g., "When You Wish Upon A Star" in FIG. 7, is finished playing, tape indexing and searching apparatus 22 may either control the VCR to stop automatically, or rewind the tape and repeat playing the selected program, or continue to play the tape so that the next program is displayed. i.e., "Belle". The viewer may stop the program by pressing the STOP button 35.

35 Preferably, if the tape loaded in the VCR is not encoded with control and directory information, the screen of FIG. 4 is displayed. A menu for operation of apparatus 22 is displayed in listing area 58 and a prompting message is displayed in area 56. The viewer inputs a number to identify the function to be performed. The viewer's objective is to identify

the video tape on which a program to be played is stored. If the viewer seeks to find the program by video tape number, the viewer inputs the number "1" and the screen shown in FIG. 5 is displayed by television 24. If the viewer seeks to find the program by title, the viewer inputs the number "2" and the screen shown in FIG. 6 is displayed by television 24. After the appropriate tape is loaded in the VCR is loaded, the screen shown in FIG. 7 is displayed. If the program is searched by title (FIG. 6), the selected program will be highlighted by cursor 60 upon entering the screen of FIG. 7. If the program is searched by 5 tape number, the program stored at the beginning of the tape will be highlighted by cursor 60 in listing area 58. In the screen of FIG. 7, when the viewer presses PLAY button 32, the TIS apparatus 22 initiates a program search. As described above, TIS apparatus 22 controls VCR 16 to locate the program selected by cursor 60 on the tape, play the tape and display the 10 selected program in PIP window 50. In an alternate embodiment, when the appropriate tape is loaded, TIS apparatus 22 automatically initiates a program search for the selected program.

15 While in the guide mode, INDEX button 30 controls switch 20. Thus, from an EPG screen such as that shown in FIG. 3, the viewer may switch to a tape index screen such as that shown in FIG. 4, and vice versa, as shown in FIGs. 11A and 11B. Since only switch 20 is controlled by INDEX button 30, according to this embodiment, the program being displayed 20 in PIP window 50 is unchanged as the background 52 is switched between an EPG and a tape index guide. Preferably INDEX button 30 is inoperable in the television mode.

PLAY button 32 controls program source switch 14 in either the television mode or the guide mode to switch between tuner 12 and VCR 16. Thus, the viewer may switch 25 between the program output by VCR 16 and the program output by tuner 12 in the PIP window 50 while in the guide mode. Also, if a tape is loaded in VCR 16 and is not playing, pressing PLAY button 32 will cause the VCR to begin playing the tape when switching program source switch 14 from tuner 12 to VCR 16. Preferably a highlighted area 62 which includes the program listing for the program tuned by the tuner is included in area 52 of the tape index guide screens. This allows the viewer to identify the currently telecast program 30 displayed in the PIP window 50 while in the tape index guide.

35 Preferably, if the viewer enters the tape index guide from the EPG and no video tape is loaded in VCR 16, television 24 displays the screen of FIG. 4, with the program output from the tuner displayed in PIP window 50 (e.g., ABC Channel 7). The viewer navigates recorded program in listing area 58 highlighted by cursor 60 is displayed in area 56. Thus, the viewer can scan the descriptions of the recorded programs in area 56 by moving cursor 60 with arrow keys 36 and 38, while continuing to see the currently telecast program in PIP window 50. After the viewer identifies and loads into VCR 16 the video tape on which the

desired program is recorded, the screen of FIG. 7 is displayed. If the viewer knows the tape in advance, the menus of FIGS. 4 to 6 can be bypassed by loading the tape into VCR 16 before pressing INDEX button 30.

The viewer may exit the guide mode, from either the EPG or the tape index guide, using GUIDE/TV button 28. When the user presses the GUIDE/TV button while in the guide mode, the PIP chip 23 is turned off. Thus, the program source to which program source switch 14 is switched, i.e., tuner 12 or VCR 16, will be directly coupled to the television and the program output from that program source will be displayed full screen, as shown in FIG. 12A and 12B.

In all the described modes, the sound accompanying the video program displayed in PIP window 50 is reproduced by the loudspeaker of television 24.

According to yet another alternate embodiment of the invention, the apparatus may be configured to display a PIP window 60 in the television mode, thereby allowing the viewer to view the recorded program being output by VCR 16 and the currently telecast program being output by tuner 12 simultaneously. As shown in FIG. 8, the VCR 16 and tuner 12 are both connected to switch 20' which switches between the video signals input from TIS apparatus 22, EPG apparatus 18, VCR 16, and tuner 12. According to this embodiment, a PIP button 62 is provided on remote controller 26 (FIG. 2). Switch 20' is controlled by a microprocessor (not shown) which is sensitive to the condition of switch 14. In the television mode, when the viewer presses the PIP button 63, the PIP chip is turned on and the controller controls each of program source switch 14 and switch 20' to switch to either the tuner or VCR output such that the last program currently being displayed full screen is displayed in the background 52 and the program from the other component (VCR 16 or tuner 12) is displayed in the PIP window 60, as shown in FIGs. 13A and 13B. If when PIP button 63 is pressed, the tuner is selected and no program is being output from the VCR, the microprocessor preferably does not turn on PIP circuit 23 and instead displays a prompt indicating that no tape is loaded in the VCR or that the VCR is not playing, depending on the condition of the VCR. Preferably, the PIP button 63 is inoperable while the apparatus is in the guide mode.

Although certain preferred embodiments of the present invention have been described herein, many modifications and variations will be apparent to those skilled in the art. It is therefore to be understood that the scope of the invention should be limited only by the appended claims.

WHAT IS CLAIMED IS:

1. A television system comprising:
 - 5 a tape index guide (TIG) generator;
 - an electronic program guide (EPG) generator;
 - a guide switch for switching between the TIG generator and the EPG generator;
- 10 a VCR including means for automatically locating a selected program on a tape;
 - a tuner;
 - a program source switch for switching between the VCR and the tuner;
 - 15 a picture in picture (PIP) generator operatively connected to the guide switch and to the program source switch; the PIP generator having an active and an inactive mode, wherein in the active mode the PIP generator displays on a television screen a first area displaying a television program output from the program source switch and a second area displaying guide information output from the guide switch; and
 - 20 a microprocessor for controlling the PIP generator between the inactive and active modes.
2. The television system of claim 1 wherein the microprocessor comprises:
 - means for controlling the operation of the VCR and the automatic tuning means;
 - 25 means for controlling the output of the guide switch; and
 - means for controlling the output of the program source switch.
3. The television system of claim 2 wherein the guide switch is operatively connected to the tuner and to the VCR.
- 30 4. In a television system comprising a tape index guide (TIG) and an electronic program guide (EPG), a method for navigating between a guide mode and a television viewing mode comprising the steps of:
 - in the television viewing mode displaying on a television screen a selected program;
 - 35 selecting the guide mode;
 - switching from the television viewing mode to the guide mode;
 - displaying in a first area of the screen the selected program and displaying in a second area of the screen guide information.

5. The method of claim 4 wherein the selected program is a recorded program and the guide information comprises the TIG.

5

6. The method of claim 4 wherein the selected program is a currently telecast program and the guide information comprises the EPG.

10

7. The method of claim 4 wherein the guide information comprises a plurality of program listings including a listing for the selected program.

8. The method of claim 7 further comprising the step of highlighting the selected program listing.

15

9. The method of claim 7 further comprising the step of:

moving the cursor to highlight a listing for a second selected program displayed in the second area;

displaying in the first area the second selected program;

selecting the television mode;

20

switching from the guide mode to the television mode; and

displaying on the television screen the second selected program.

25

10. In a television system comprising a tape index guide (TIG) and an electronic program guide (EPG), a method for navigating between the guides comprising the steps of:

in a guide mode displaying in a first area of a television screen a first guide comprising either the EPG or the TIG and in a second area a program;

selecting the other guide;

displaying in the second area the other guide without changing the program displayed in the first area.

30

11. The method of claim 10 wherein the program is a currently telecast program, wherein the other guide is the TIG, and wherein the TIG comprises a prompt.

35

12. In a television system comprising a tape index guide (TIG) and an electronic program guide (EPG), a method for navigating between the guides comprising the steps of:

(a) selecting a program source from either a tuner or a video cassette recorder (VCR);

(b) displaying in a first area of a television screen a program output from the

selected program source and in a second portion a guide;

- 5 (c) selecting the other program source; and
- (d) displaying in the first area the program output from the other program source without changing the guide in the second area.

13. The method of claim 12 further comprising a step between step (c) and step (d) of controlling the VCR to play a recorded program on the tape wherein in step (c) the selected program source is the tuner and wherein the VCR is not playing a loaded tape.

15

20

25

30

35

FIG. 1

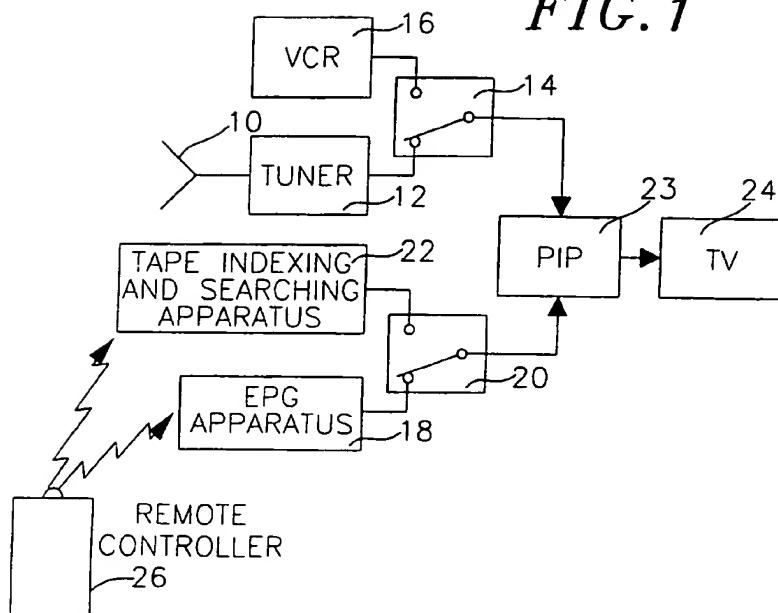
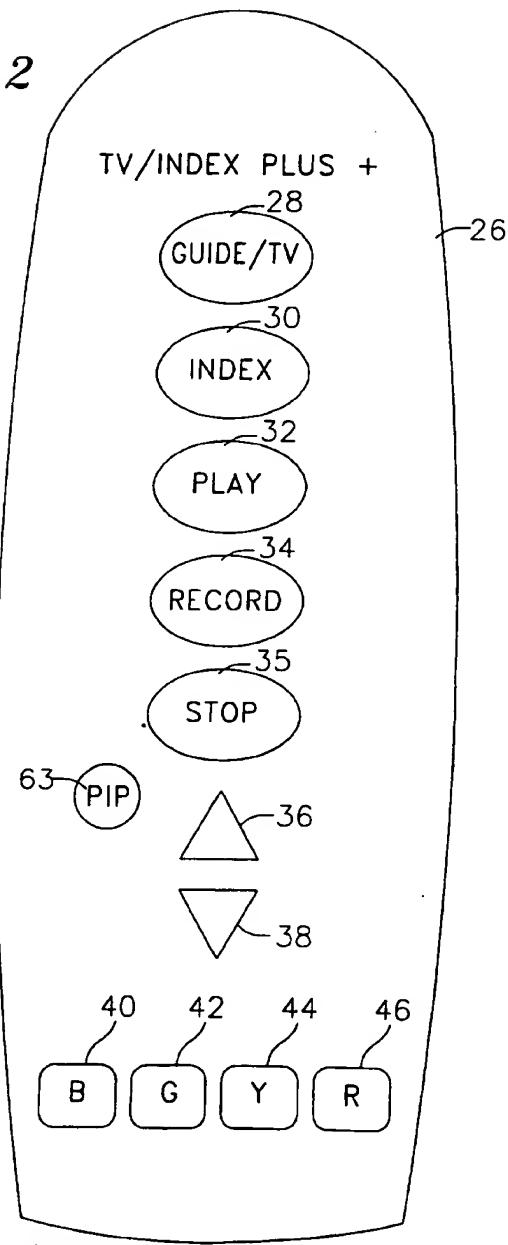


FIG.2

SUBSTITUTE SHEET (RULE 26)

FIG. 3

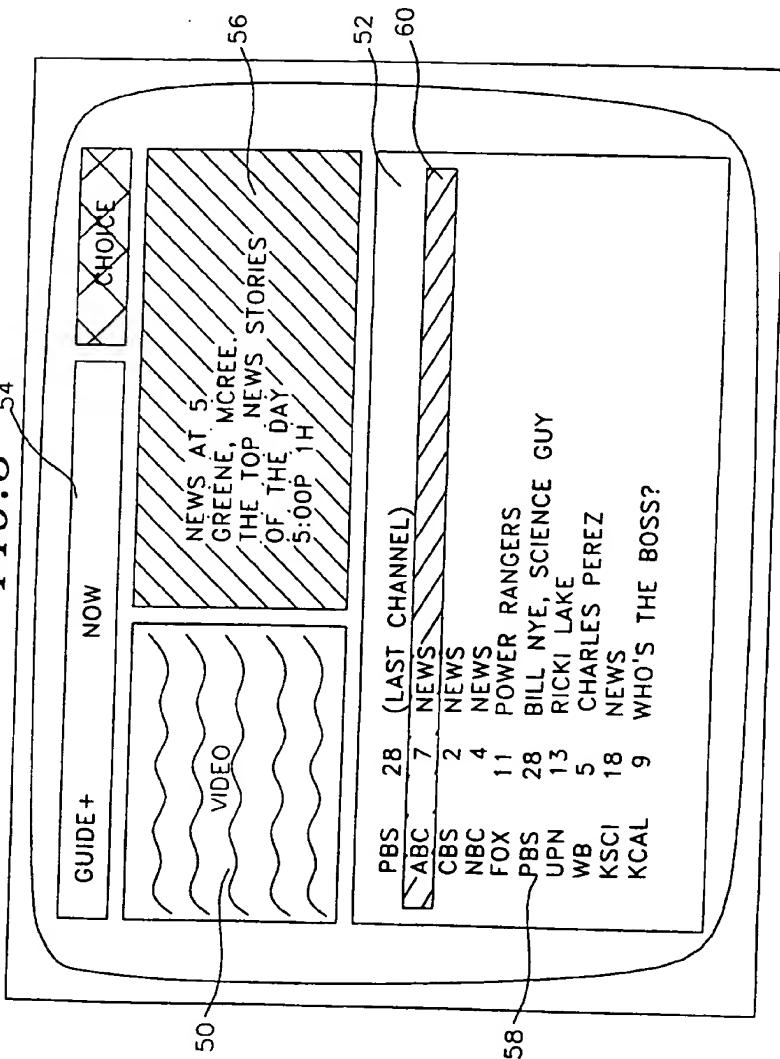


FIG. 4

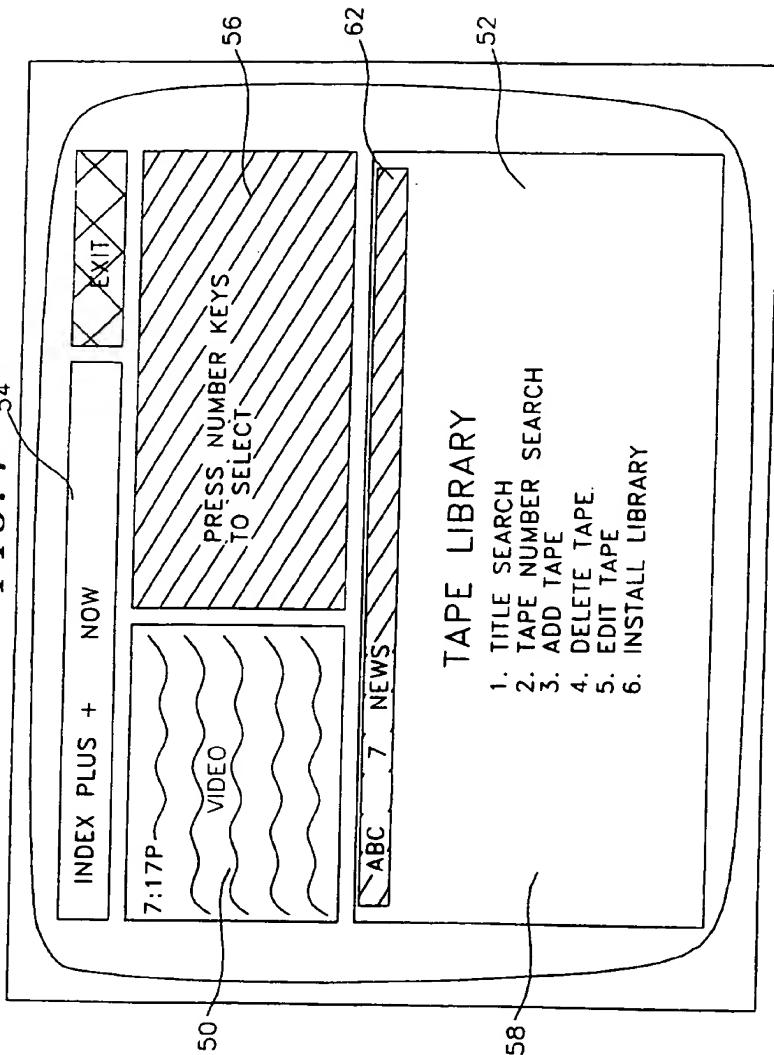
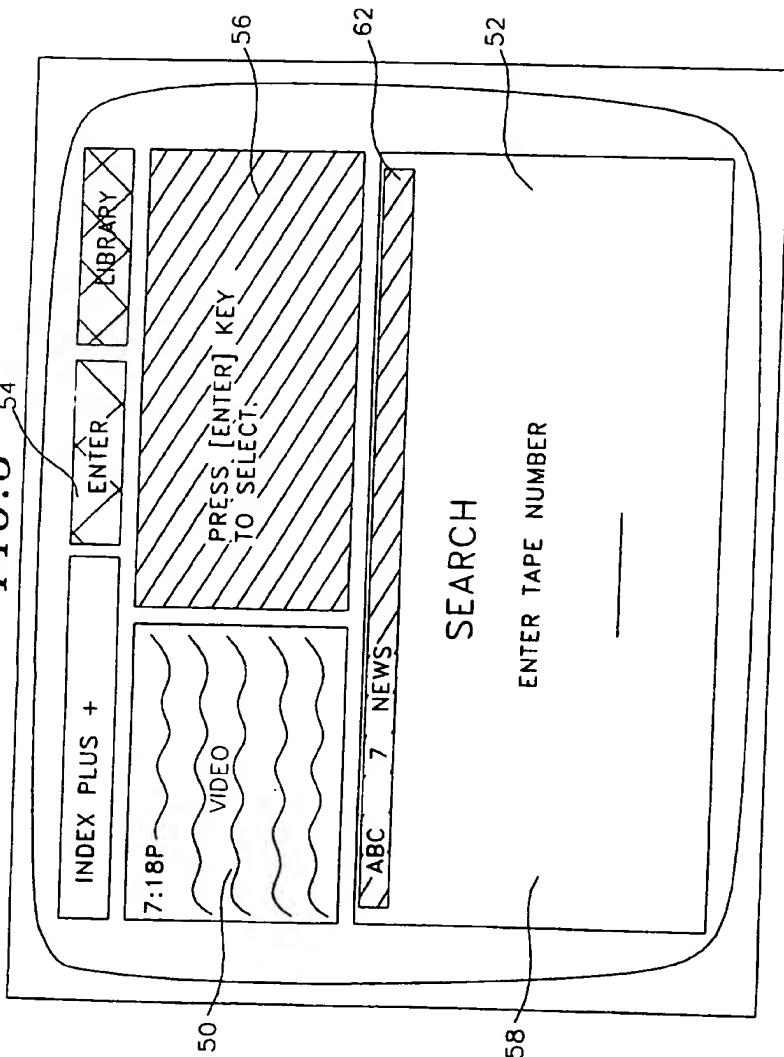
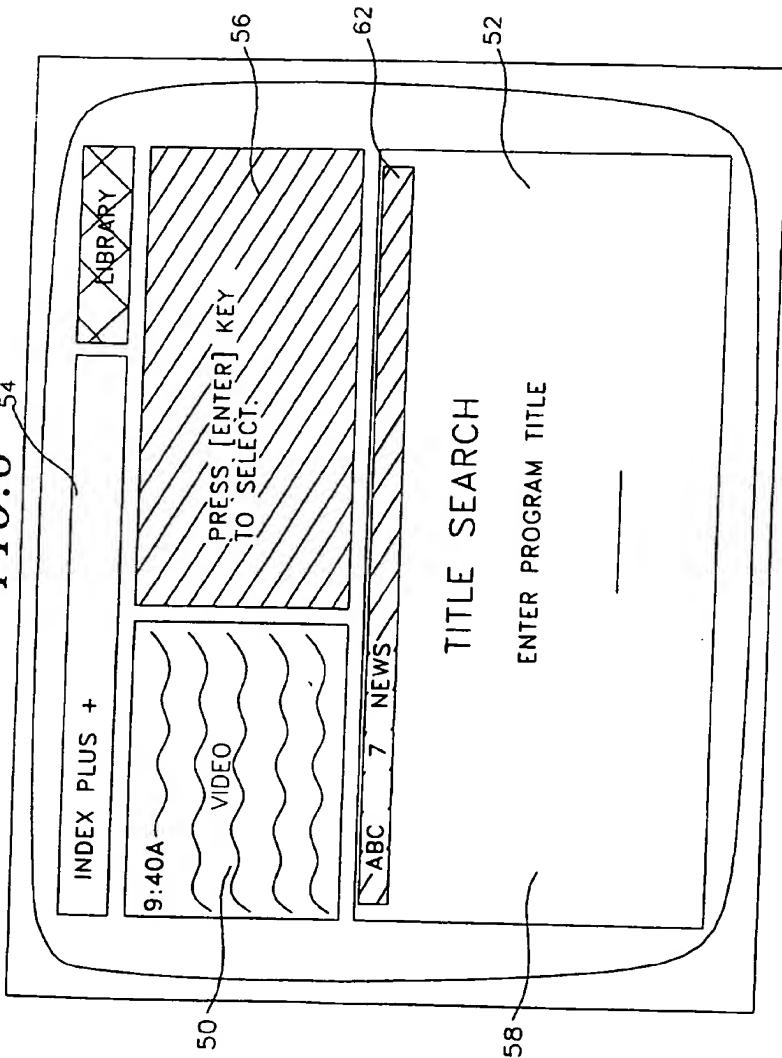


FIG. 5

6/18

FIG. 6

7/18

FIG. 7

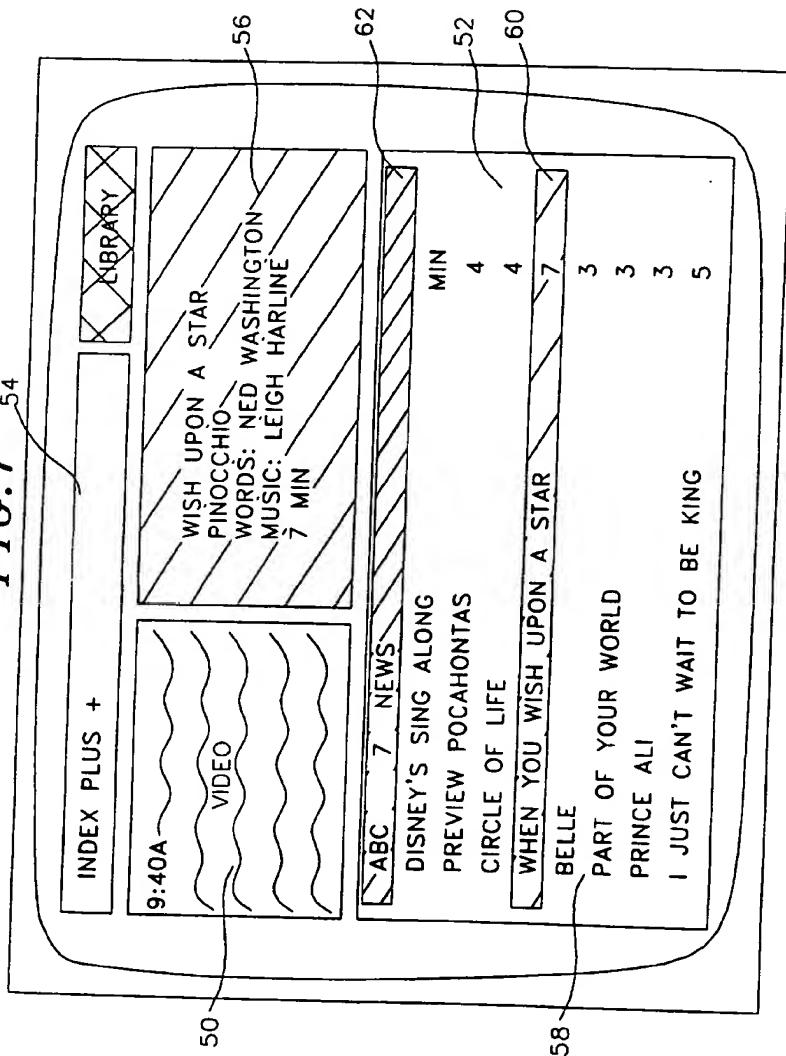


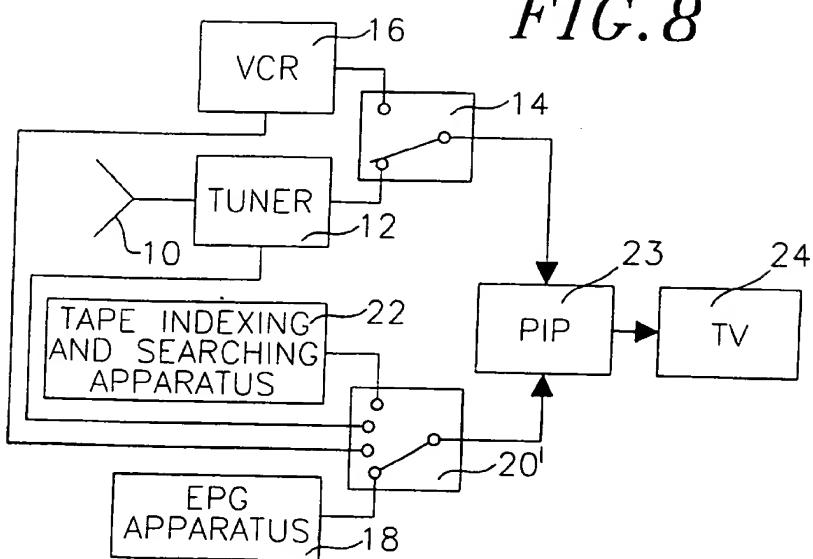
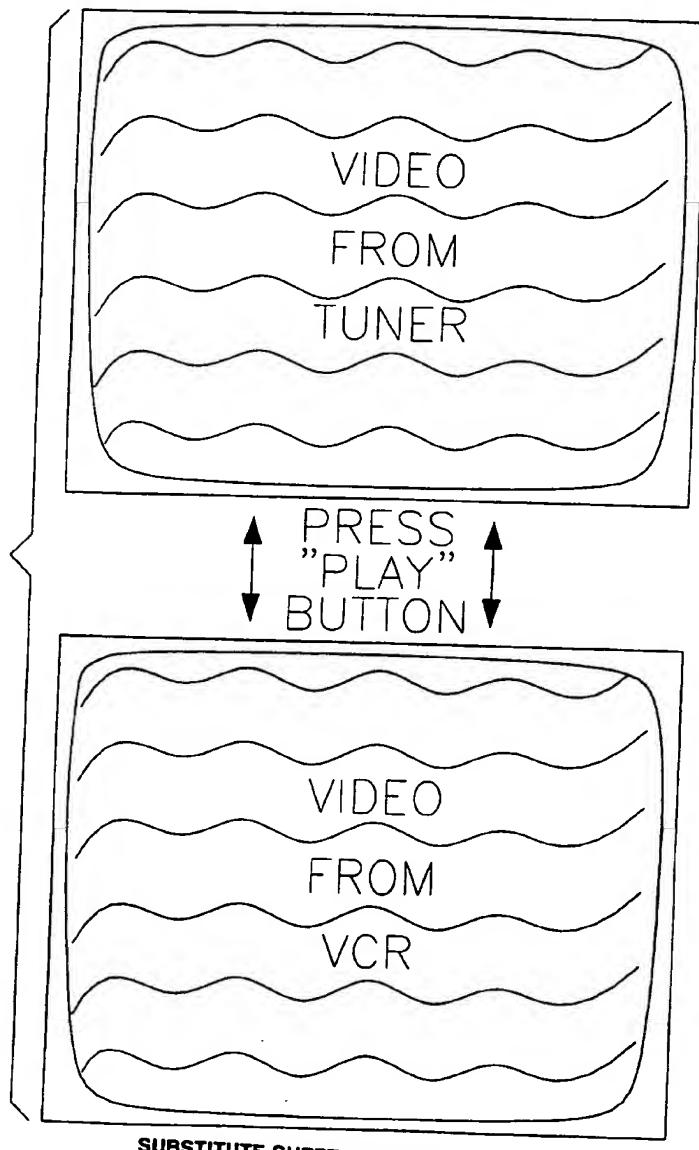
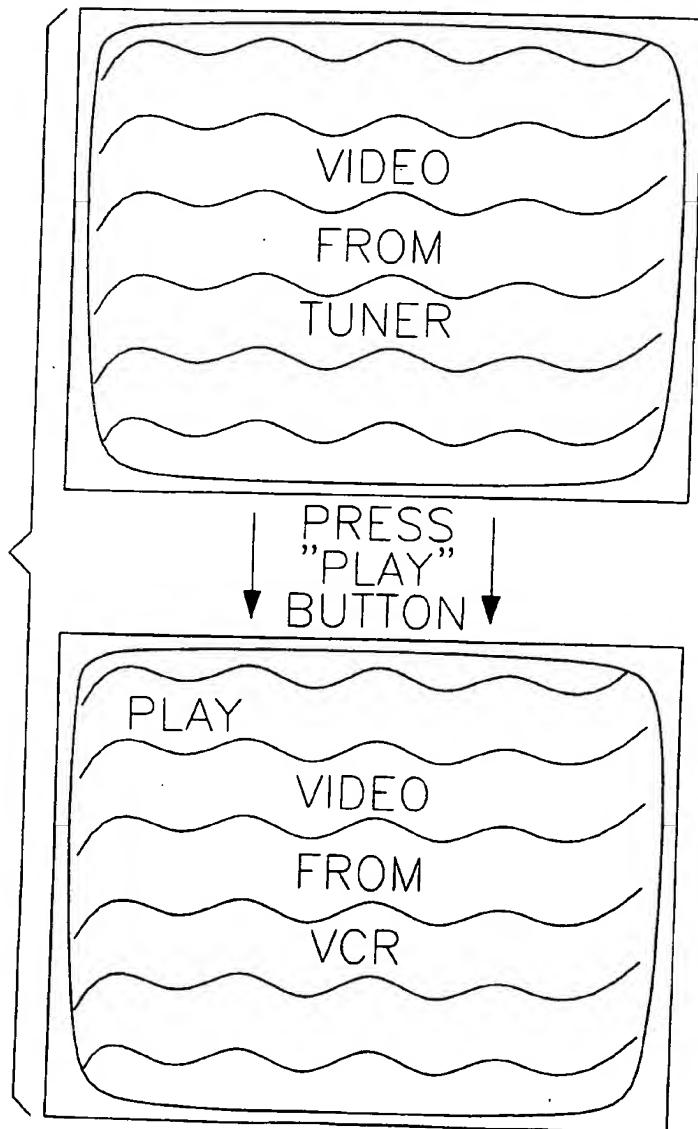
FIG. 8

FIG. 9A

SUBSTITUTE SHEET (RULE 26)

FIG. 9B

11/18

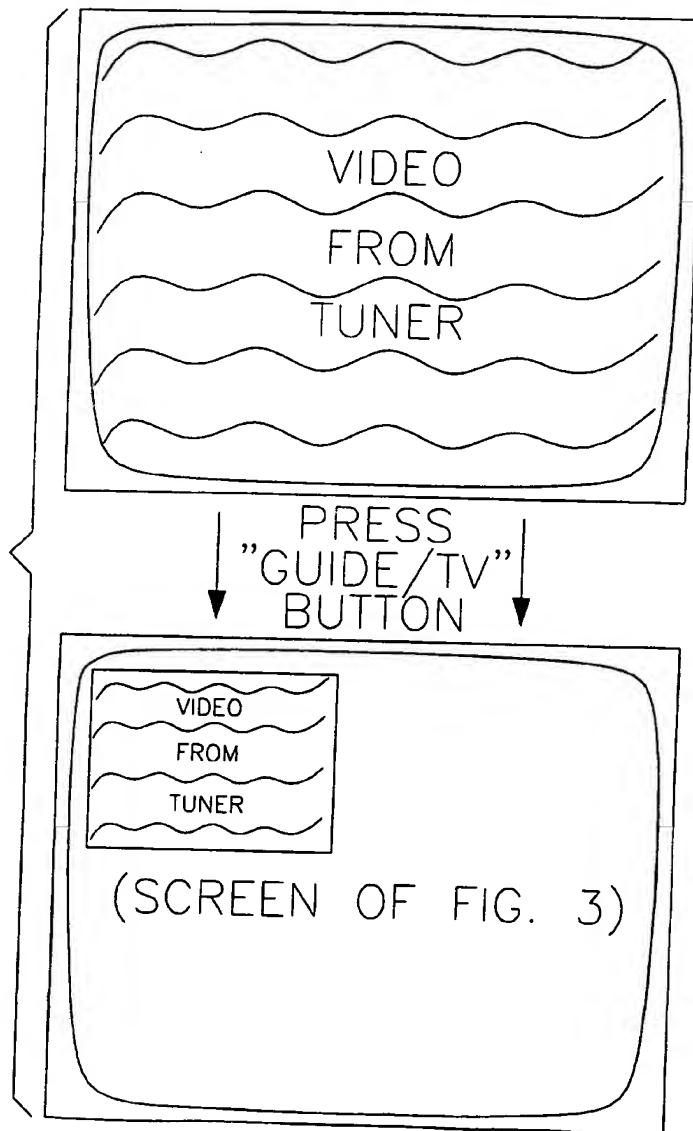
FIG. 10A

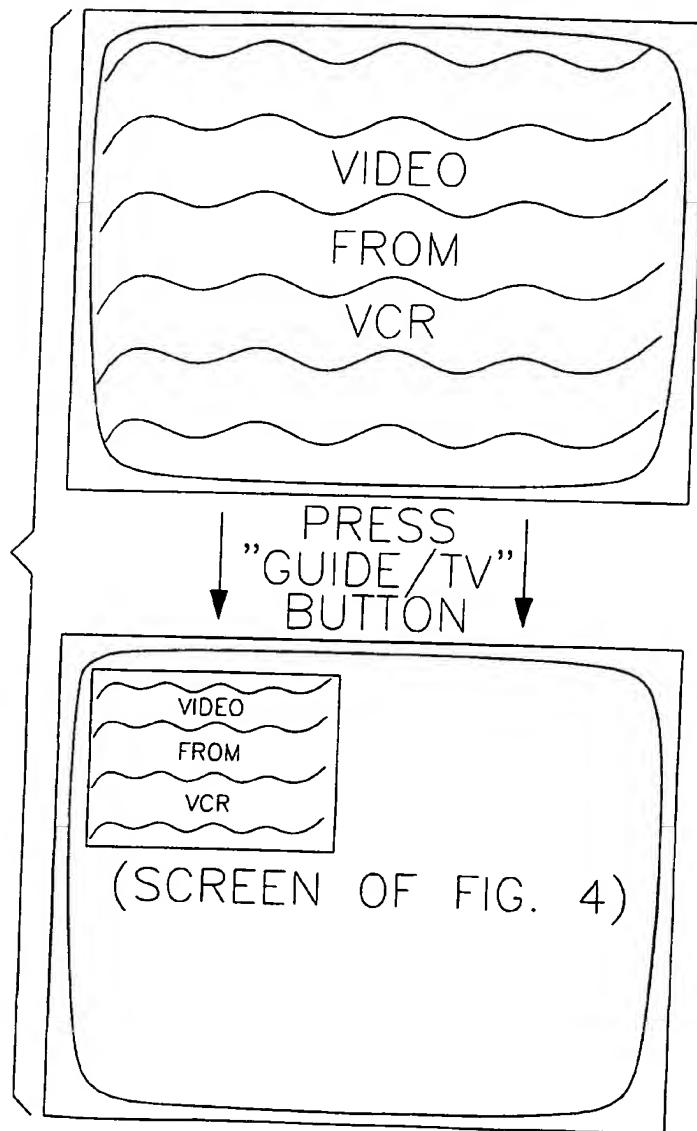
FIG. 10B

FIG. 11A

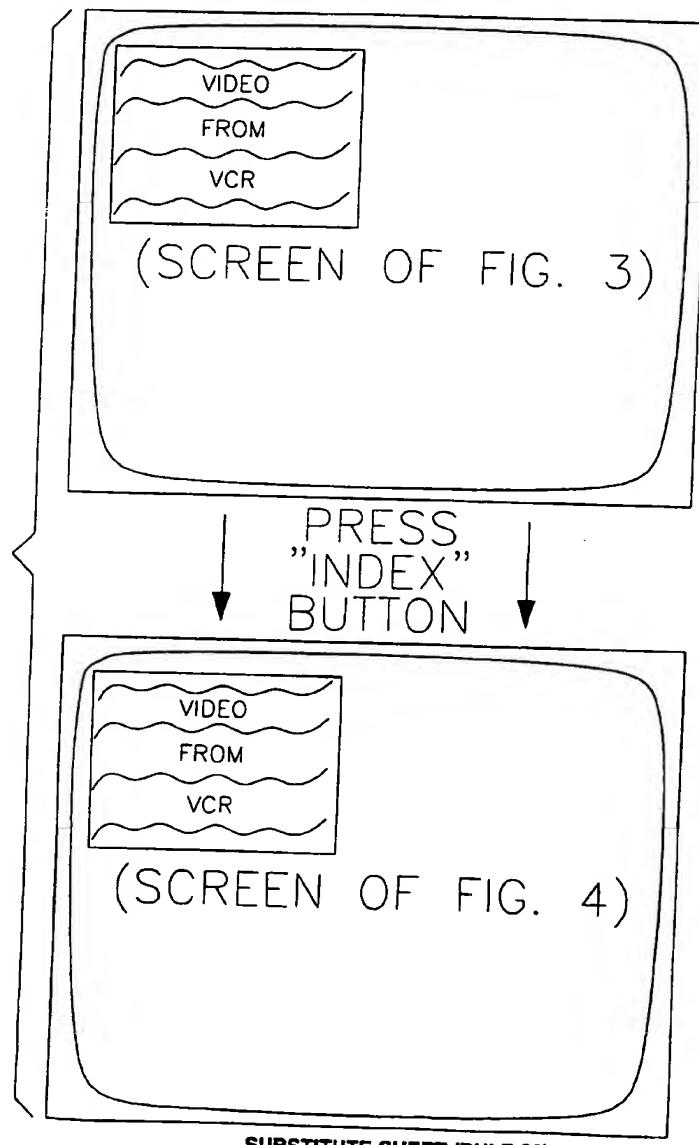


FIG. 11B

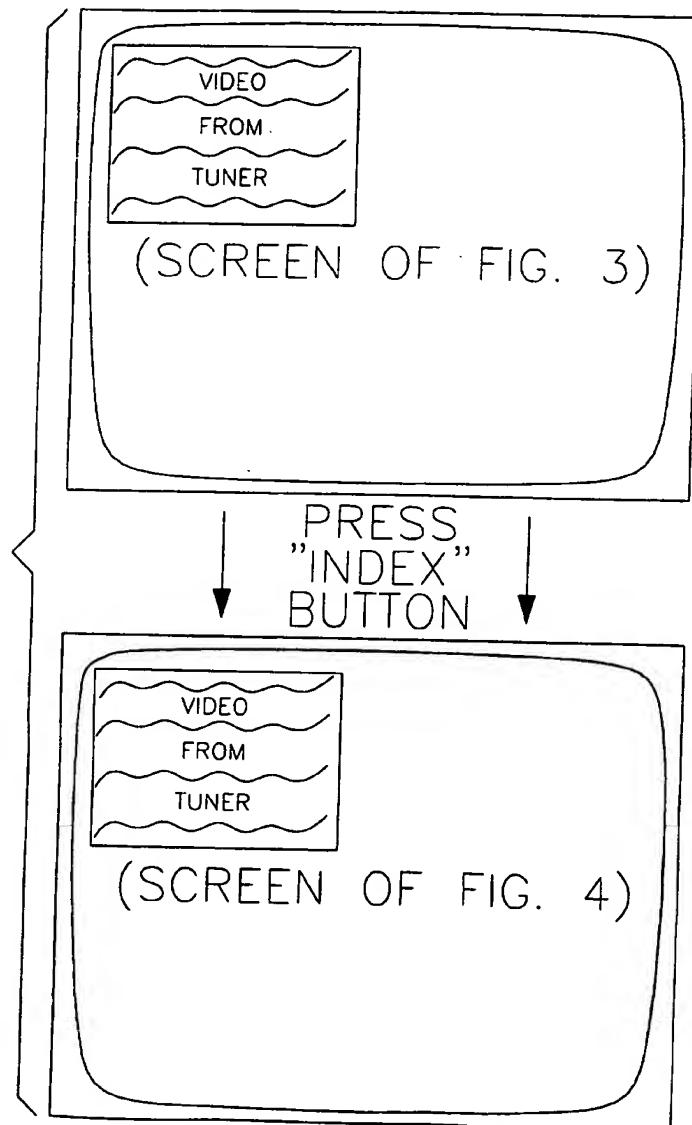


FIG. 12A

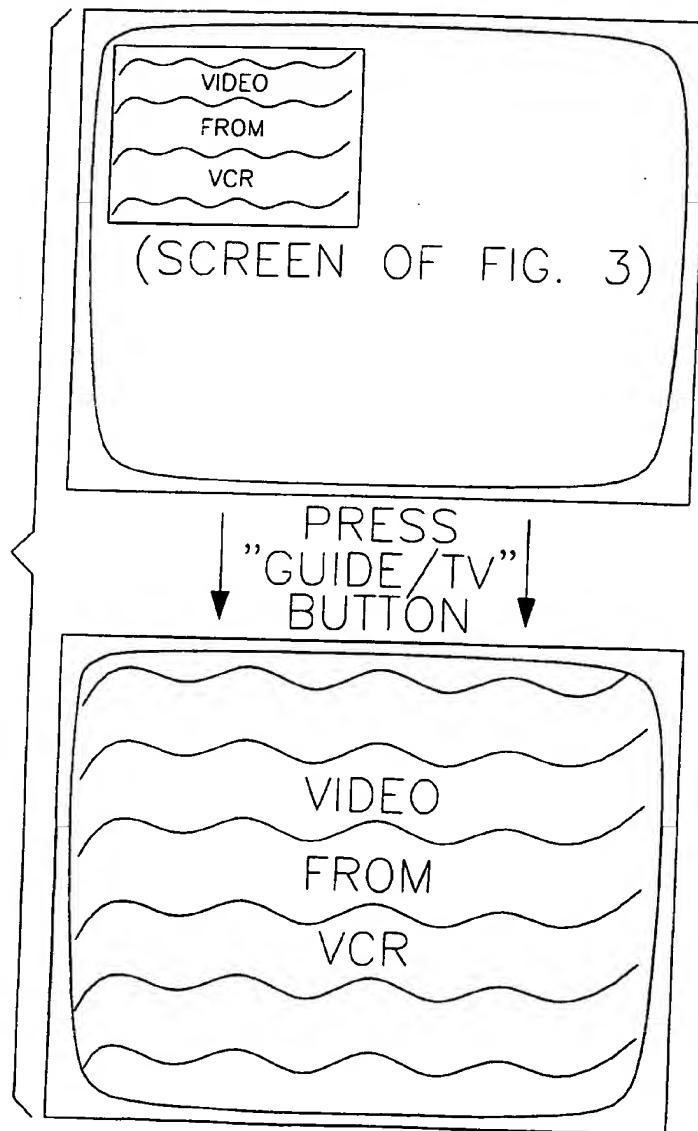


FIG. 12B

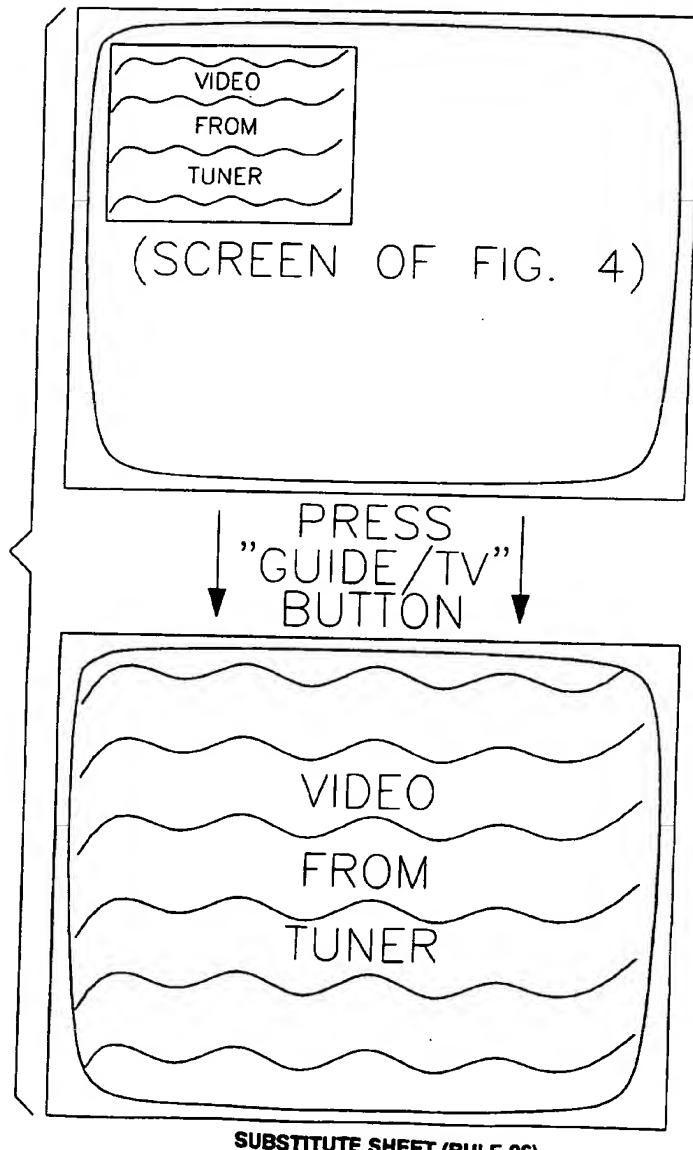


FIG. 13A

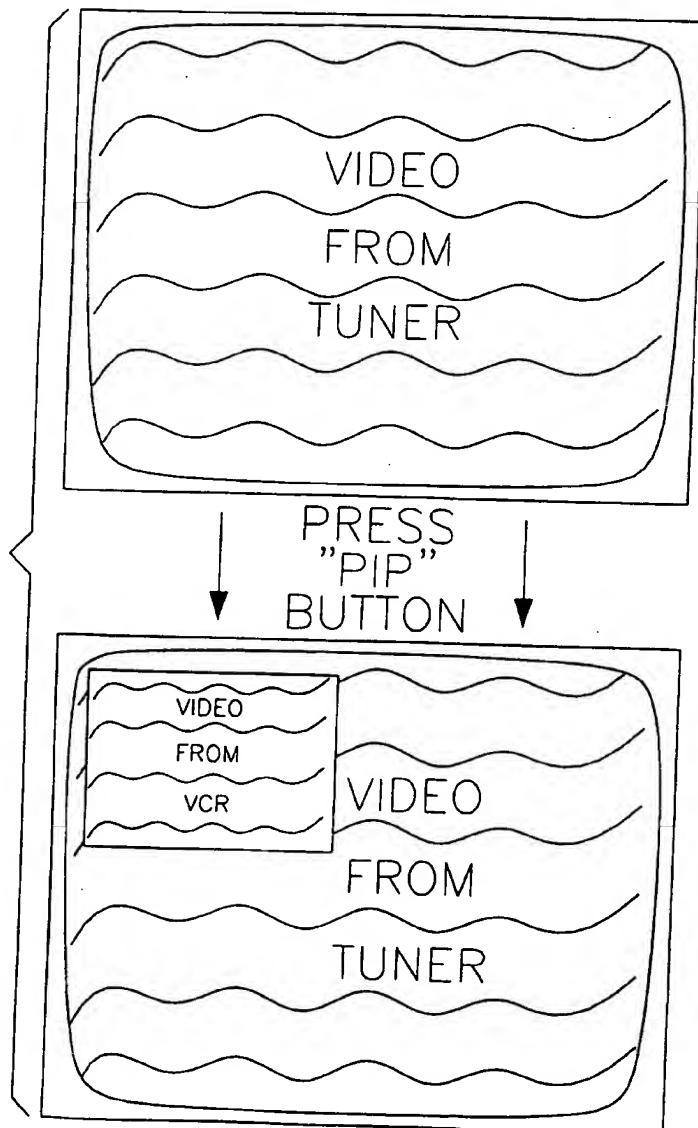
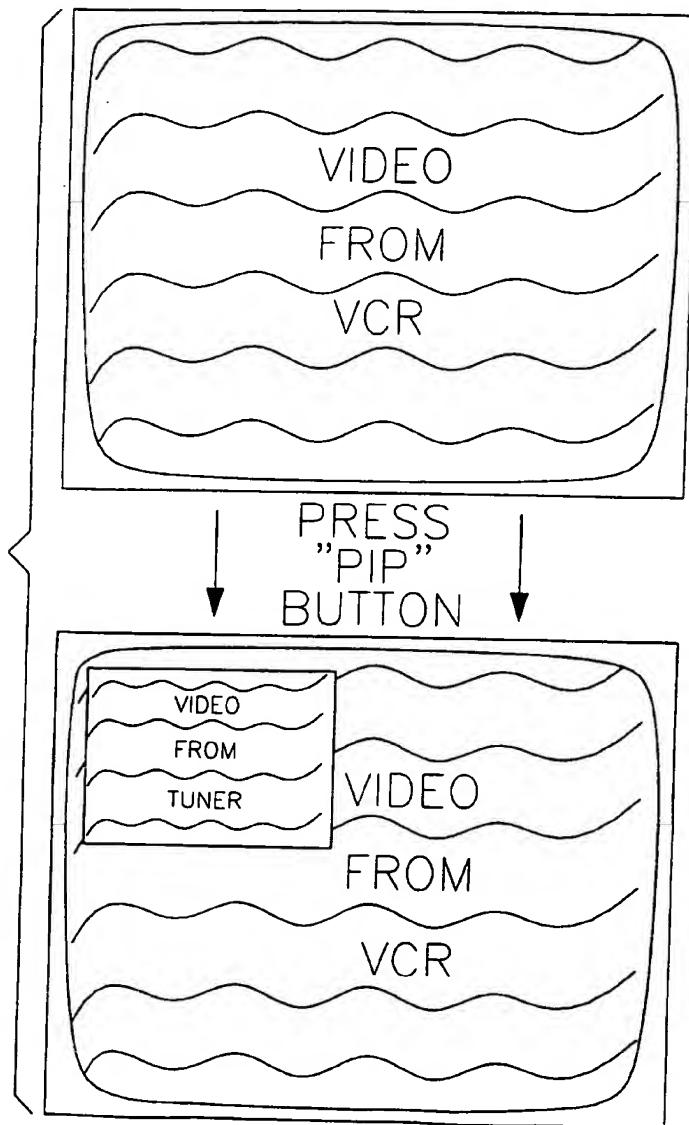


FIG. 13B

INTERNATIONAL SEARCH REPORT

International application No.
PCT/US97/04074

A. CLASSIFICATION OF SUBJECT MATTER

IPC(6) :H04N 5/445
US CL :348/563, 906

According to International Patent Classification (IPC) or to both national classification and IPC

B. FIELDS SEARCHED

Minimum documentation searched (classification system followed by classification symbols)

U.S. : 348/563, 906, 569, 570, 731, 732, 6, 7, 10, 12

Documentation searched other than minimum documentation to the extent that such documents are included in the fields searched
none

Electronic data base consulted during the international search (name of data base and, where practicable, search terms used)
none

C. DOCUMENTS CONSIDERED TO BE RELEVANT

Category*	Citation of document, with indication, where appropriate, of the relevant passages	Relevant to claim No.
Y,P	US 5,594,509 A (FLORIN ET AL.) 14 JANUARY 1997, COL. 8, LINE 19, TO COL. 25, LINE 26.	1-13
Y,P	US 5,532,754 A (YOUNG ET AL.) 02 JULY 1996, COL. 21, LINE 60, TO COL. 26, LINE 60.	1-13
T	US 5,614,940 A (COBBLEY ET AL.) 25 MARCH 1997, THE WHOLE DOCUMENT.	1-13
T	US 5,621,579 A (YUEN) 15 APRIL 1997, THE WHOLE DOCUMENT.	1-13

Further documents are listed in the continuation of Box C. See patent family annex.

- *A* Special categories of cited documents:
- "A" document defining the general state of the art which is not considered to be of particular relevance
- "E" earlier document published on or after the international filing date
- "L" document which may throw doubt on priority claim(s) or which is cited to establish the publication date of another citation or other special reason (as specified)
- "O" document referring to an oral disclosure, use, exhibition or other means
- "P" document published prior to the international filing date but later than the priority date claimed

"T" later document published after the international filing date or priority date and not in conflict with the application but cited to understand the principle or theory underlying the invention

"X" document of particular relevance; the claimed invention cannot be considered novel or cannot be considered to involve an inventive step when the document is taken alone

"Y" document of particular relevance; the claimed invention cannot be considered to involve an inventive step when the document is combined with one or more other such documents, such combination being obvious to a person skilled in the art

"A" document member of the same patent family

Date of the actual completion of the international search	Date of mailing of the international search report
20 MAY 1997	08 JUL 1997
Name and mailing address of the ISA/US Commissioner of Patents and Trademarks Box PCT Washington, D.C. 20231	Authorized officer <i>[Signature]</i> MICHAEL LEE
Facsimile No. (703) 305-3230	Telephone No. (703) 305-4700